

## Auxiliary Controls

### Windscreen wipers/washers

On right hand side of steering column

Lift up for 3 speeds

Pull towards you for rear wipers

Press button for washers

### Side/Head Lights

Rotary switch on right hand side of dashboard

Turn clockwise

1<sup>st</sup> position – side lights

2<sup>nd</sup> position – headlights

Always drive on headlights – Main beam

Indicator arm – pull towards you

Dashboard warning light

### Fog Lights

Rotary switch on right hand side of dashboard

Only works when lights are on – Pull out

1<sup>st</sup> position – front fog lights

2<sup>nd</sup> position – hi intensity rear fog lights

Dashboard warning light

Visibility must be less than 100 mtrs

### Hazard Lights

Push switch in centre of dashboard

Operates all four indicators

Only use in emergency, stopping on motorways

DO NOT USE for illegal parking

### Windows

Side windows – 2 switches on drivers arm rest

Up/down – both sides

Front/Back windows

Demist – 2 switches in front of gear lever

### Gauges

Speedometer

Rev Counter

Temperature

Fuel